

## Direct connection for Windows

[dhcp\\_server\\_for\\_windows](#)

## Re-burning SD Card

Only for SMS-200, to initialize whole system.

[burn\\_sdcard\\_image](#)

## File Tag Encoding and Display Issues

[https://kb.roonlabs.com/FAQ:Some\\_characters\\_are\\_not\\_displaying\\_properly](https://kb.roonlabs.com/FAQ:Some_characters_are_not_displaying_properly)

## IckStream in LMS

[how\\_to\\_install\\_ickstream\\_app\\_in\\_lms](#)



LMS should be restart when you reboot Eunhasu because IckStream plugin could not get login information just after reboot.

From:  
<https://www.wiki.sotm-audio.com/> - **SOTM docs**

Permanent link:  
<https://www.wiki.sotm-audio.com/doku.php?id=en:eunhasu:advanced&rev=1489043521>

Last update: **2017/03/09 02:12**

