

1. Set static IP for sMS-200 what you want. e.g. below:
  - IP - 10.0.0.2
  - subnet - 255.255.255.0
  - gateway - 10.0.0.1
2. Set static IP for your PC, too. e.g. below:
  - IP - 10.0.0.1
  - subnet - 255.255.255.0
  - gateway - empty

ref.: <http://www.online-tech-tips.com/computer-tips/windows-mac-assign-static-ip-address/>

From:

<https://www.wiki.sotm-audio.com/> - **SOTM docs**

Permanent link:

[https://www.wiki.sotm-audio.com/doku.php?id=en:kb:direct\\_connection&rev=1500444674](https://www.wiki.sotm-audio.com/doku.php?id=en:kb:direct_connection&rev=1500444674)

Last update: **2017/07/19 02:11**

