

1. Set static IP for sMS-200.

<e.g>:

- IP - 10.0.0.2
- subnet - 255.255.255.0
- gateway - 10.0.0.1

1. Set static IP for your PC, too.

<e.g>:

- IP - 10.0.0.1
- subnet - 255.255.255.0
- gateway - empty

ref.: <http://www.online-tech-tips.com/computer-tips/windows-mac-assign-static-ip-address/>

From:

<https://www.wiki.sotm-audio.com/> - **SOTM docs**

Permanent link:

[https://www.wiki.sotm-audio.com/doku.php?id=en:kb:direct\\_connection&rev=1546394732](https://www.wiki.sotm-audio.com/doku.php?id=en:kb:direct_connection&rev=1546394732)

Last update: **2019/01/01 21:05**

