

- sDP-1000EX Main Audio USB
- 2가

가

### sDP-1000EX Main

- sDP-1000EX Main

[sDP-1000Ex\\_V2.0a\\_20190607.hex](#)

- Flip

[Flip 3.4.7 software](#)

### sDP-1000EX

sDP-1000EX PC USB  
DFU

sDP-1000EX Audio USB


- OLED
- OLED




### Flip

Flip

Flip

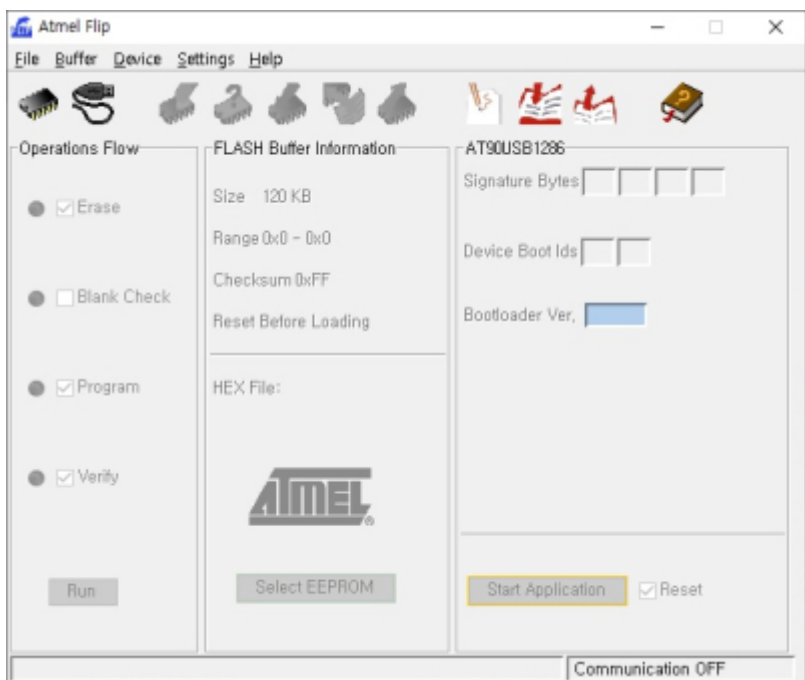


, AT90USB1286

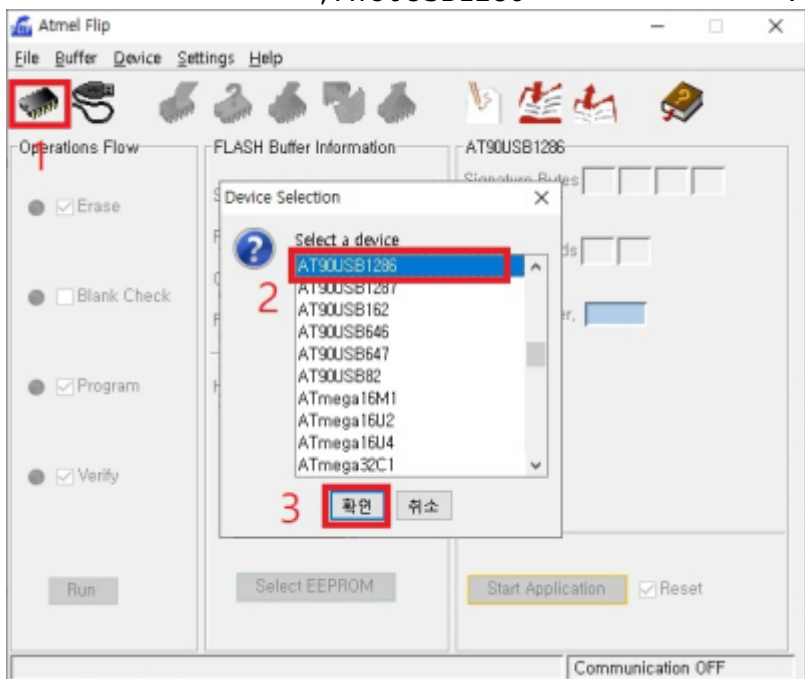


USB Port Connection


'Open'

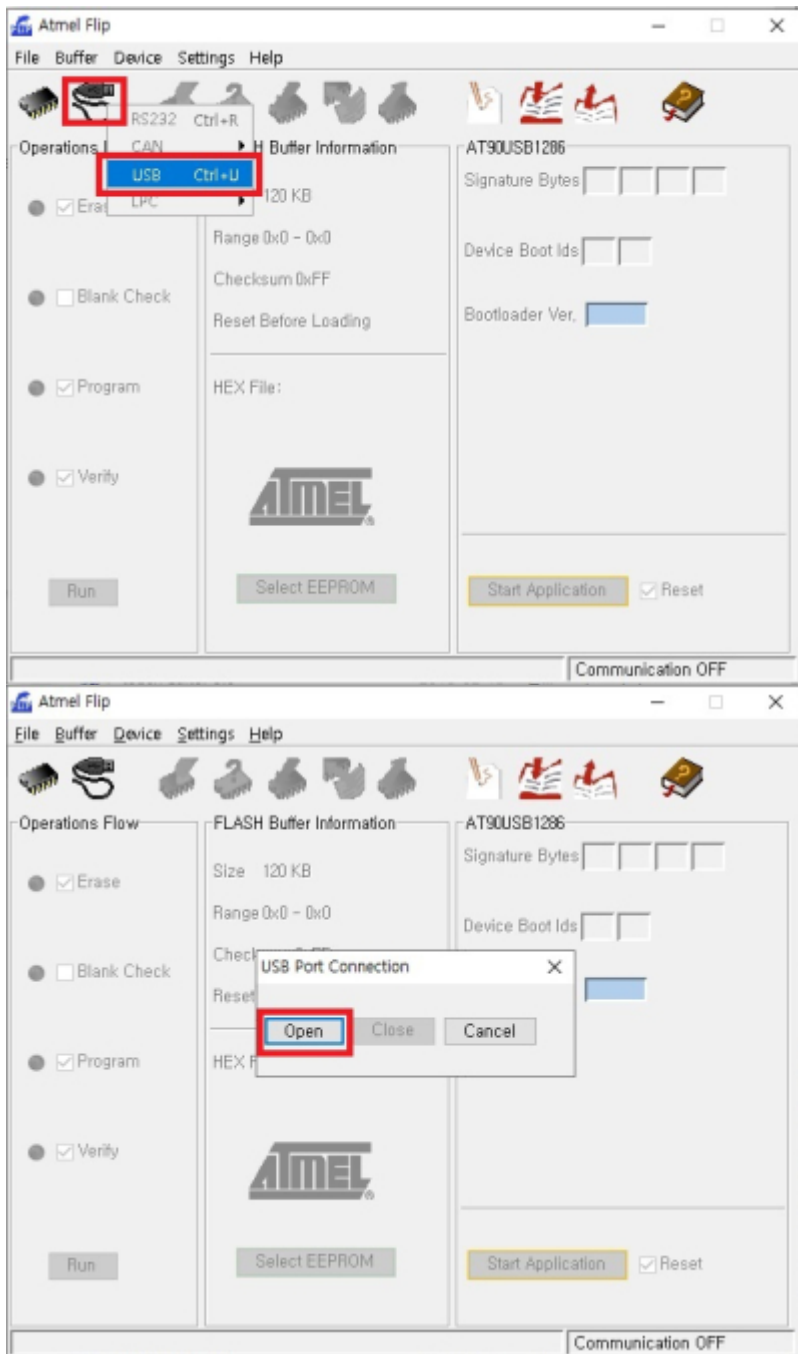

'Load Hex File

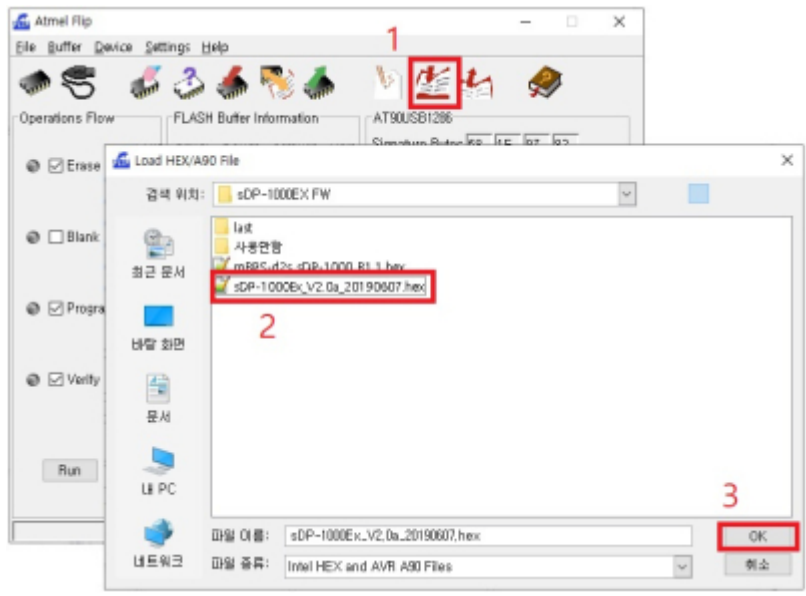

'Run'

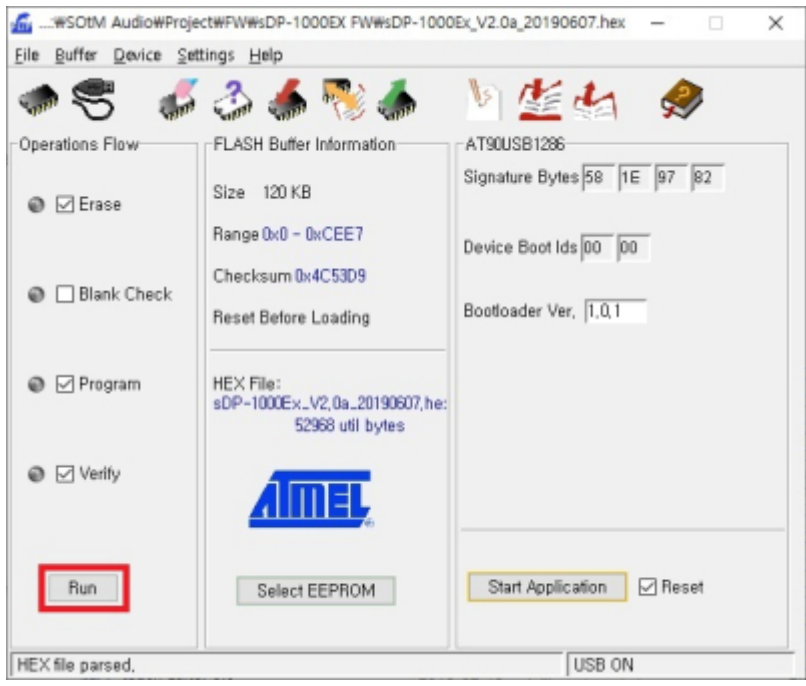

- 가 , sDP-1000EX Audio USB
- Audio
- Audio , OLED가
  - , OLED ,



## Audio USB

- Audio USB


[sDP-1000EX\\_USB\\_V6.C1\\_20190604.bin](#)

- SotM 가


[SotM USB Audio 2.0 Driver v2.23.0](#)

## SotM USB Audio Firmware Upgrade

1. sDP-1000EX PC USB sDP-1000EX
2. SotM USB Audio Firmware Upgrade

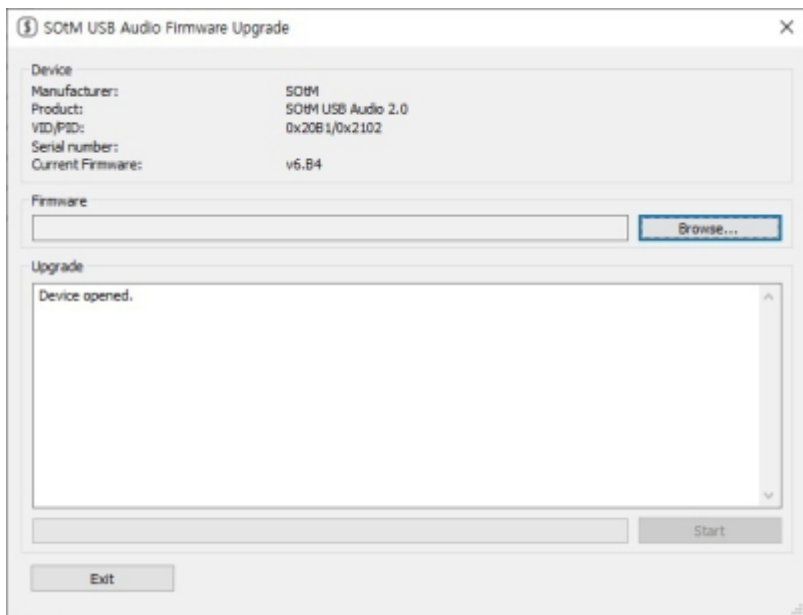

### 'Browse

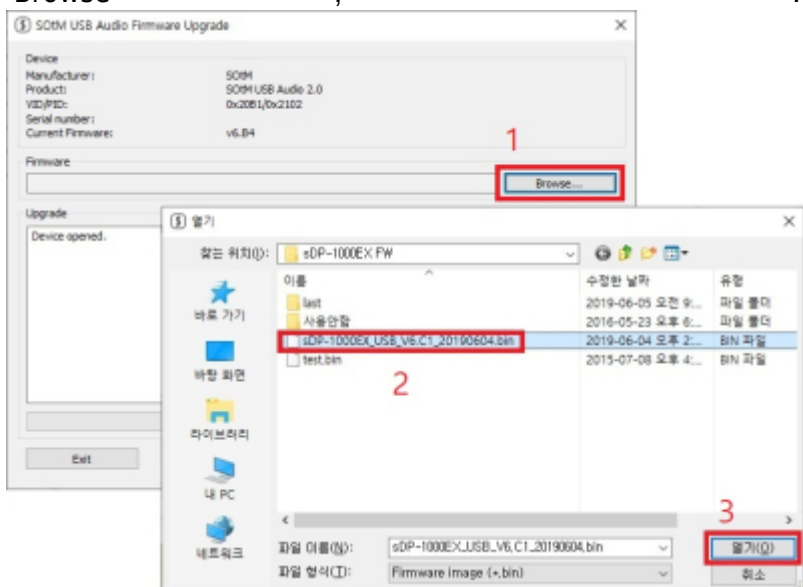

### 'Start'



가 , SOTM USB Audio Control Panel sDP-1000EX



### sDP-1000EX FW

- [sDP-1000Ex\\_V2.0a\\_20190607.hex](#)
- [sDP-1000EX\\_USB\\_V6.C1\\_20190604.bin](#)
  
- [Flip 3.4.7 software](#)
- [SOTM USB Audio 2.0 Driver v2.23.0](#)

Last update: 2019/06/23 22:17 ko:how\_to\_upgrade\_sdp-1000ex\_fw [https://www.wiki.sotm-audio.com/doku.php?id=ko:how\\_to\\_upgrade\\_sdp-1000ex\\_fw&rev=1561342672](https://www.wiki.sotm-audio.com/doku.php?id=ko:how_to_upgrade_sdp-1000ex_fw&rev=1561342672)

---

From: <https://www.wiki.sotm-audio.com/> - **SOTM docs**

Permanent link: [https://www.wiki.sotm-audio.com/doku.php?id=ko:how\\_to\\_upgrade\\_sdp-1000ex\\_fw&rev=1561342672](https://www.wiki.sotm-audio.com/doku.php?id=ko:how_to_upgrade_sdp-1000ex_fw&rev=1561342672)

Last update: **2019/06/23 22:17**

