

- sDP-1000EX Main Audio USB
- 2가

가

sDP-1000EX

Main

- sDP-1000EX Main

[sDP-1000Ex_V2.1_20190705.zip](#)

- Flip

[Flip 3.4.7 software](#)

sDP-1000EX

sDP-1000EX PC USB
DFU


sDP-1000EX Audio USB

- OLED
- OLED




Flip

Flip , Flip

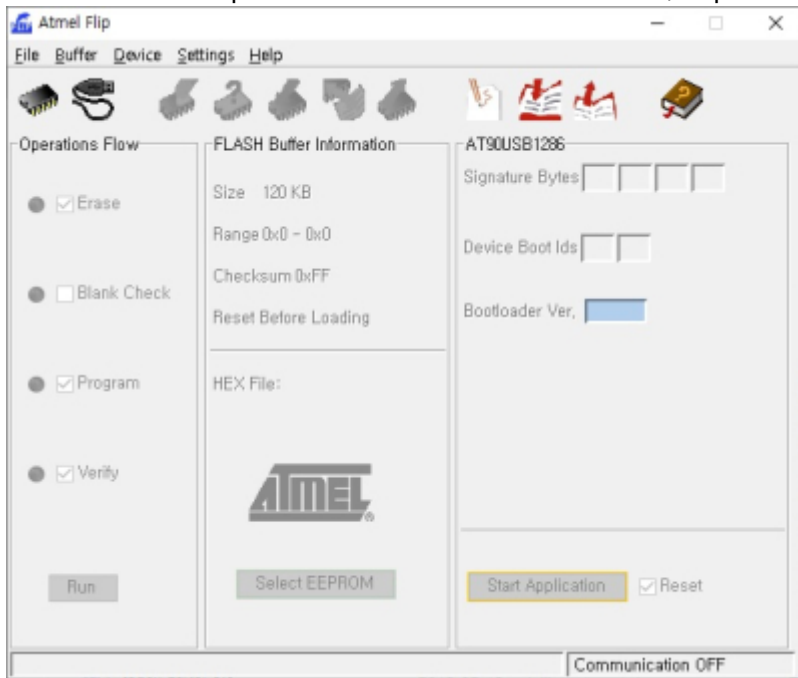


, AT90USB1286

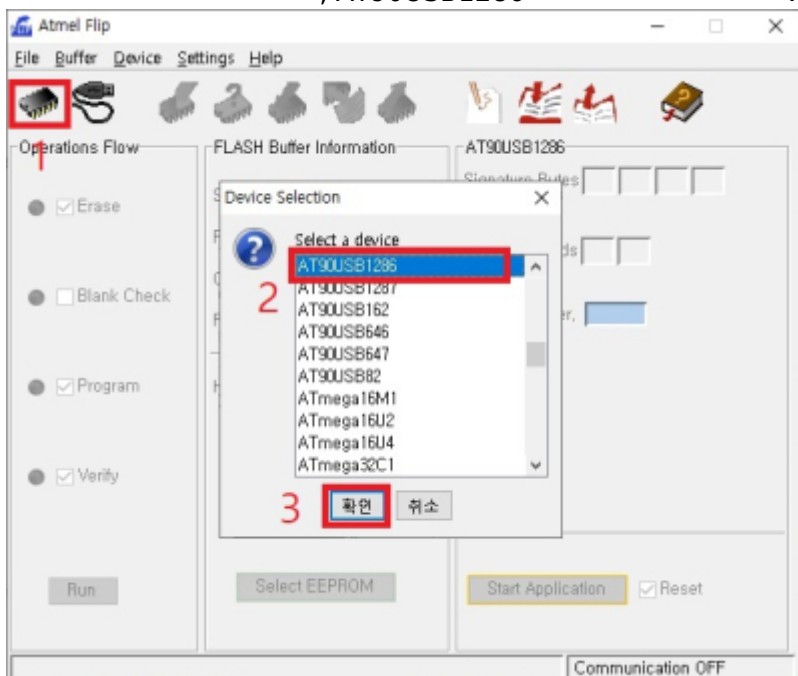


USB Port Connection 'Open'



'Load Hex File

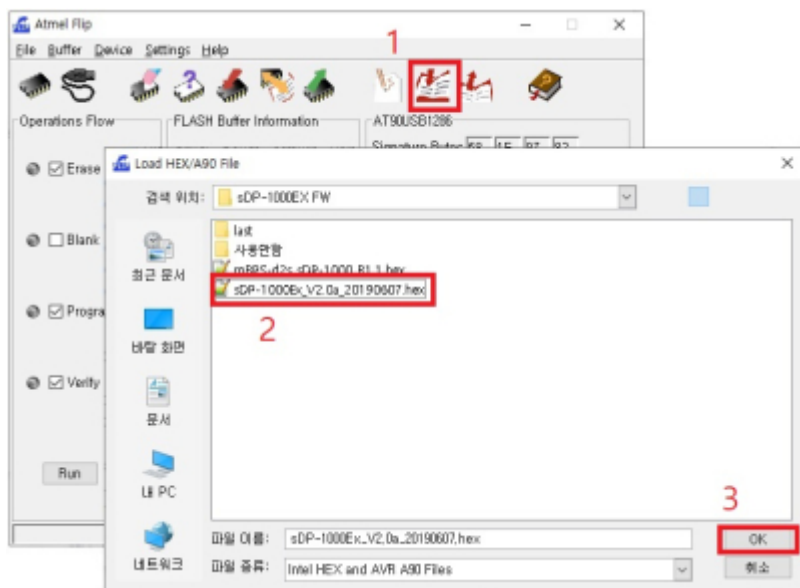

'Run'

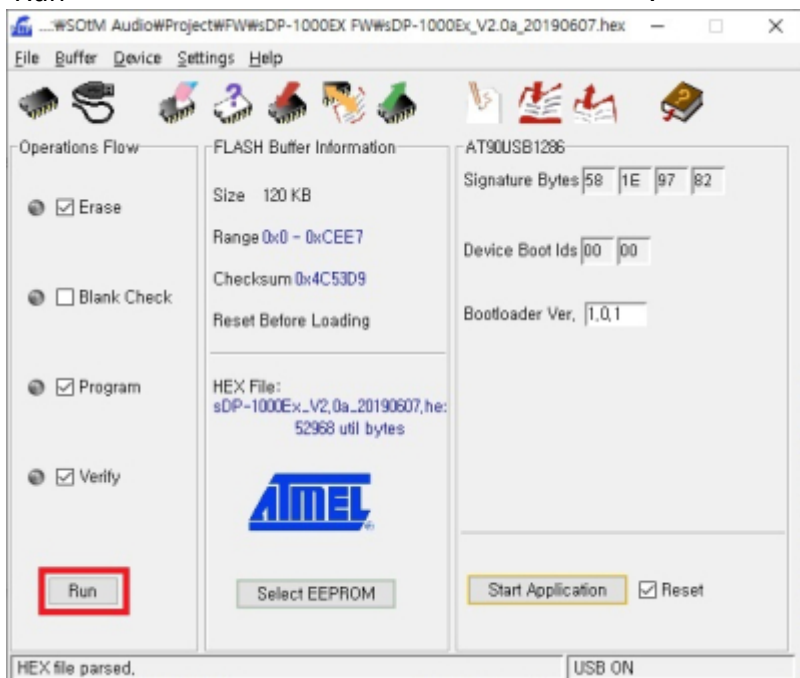

- 가 , sDP-1000EX Audio USB
- Audio
- Audio , OLED가
 - , OLED ,



Audio USB

- Audio USB

[app_usb_aud_l1_2xoxs_v6.c2.bin](#)


- SotM 가

[SotM USB Audio 2.0 Driver v2.23.0](#)


SotM USB Audio Firmware Upgrade

1. sDP-1000EX PC USB
2. Windows OS

sDP-1000EX
SotM USB Audio Firmware Upgrade

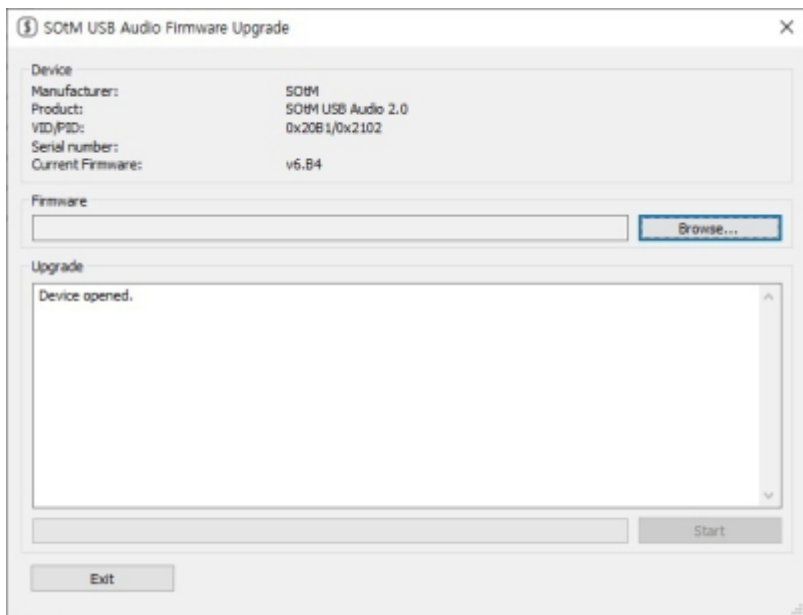

'Browse

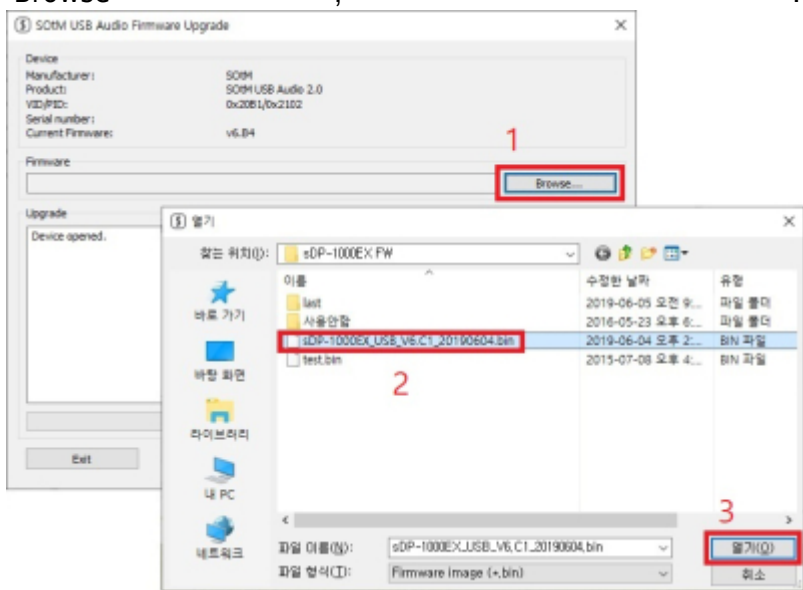

'Start'



가 , SOTM USB Audio Control Panel sDP-1000EX



sDP-1000EX FW

- [sDP-1000Ex_V2.1_20190705.zip](#)
- [app_usb_aud_l1_2xoxs_v6.c2.bin](#)

Utilities

- [Flip 3.4.7 software](#)
- [SOTM USB Audio 2.0 Driver v2.23.0](#)

Last update: 2022/03/16 01:16 ko:how_to_upgrade_sdp-1000ex_fw https://www.wiki.sotm-audio.com/doku.php?id=ko:how_to_upgrade_sdp-1000ex_fw&rev=1647407770

From: <https://www.wiki.sotm-audio.com/> - **SOTM docs**

Permanent link: https://www.wiki.sotm-audio.com/doku.php?id=ko:how_to_upgrade_sdp-1000ex_fw&rev=1647407770

Last update: **2022/03/16 01:16**

