

# Roon

Roon

가

. Control, Output, Core

Roon

## Roon Ready


Roon Ready Roon Server, Roon Remote

. Roon Ready

RoonBridge

. hqplayer\_naa

## Roon Ready config

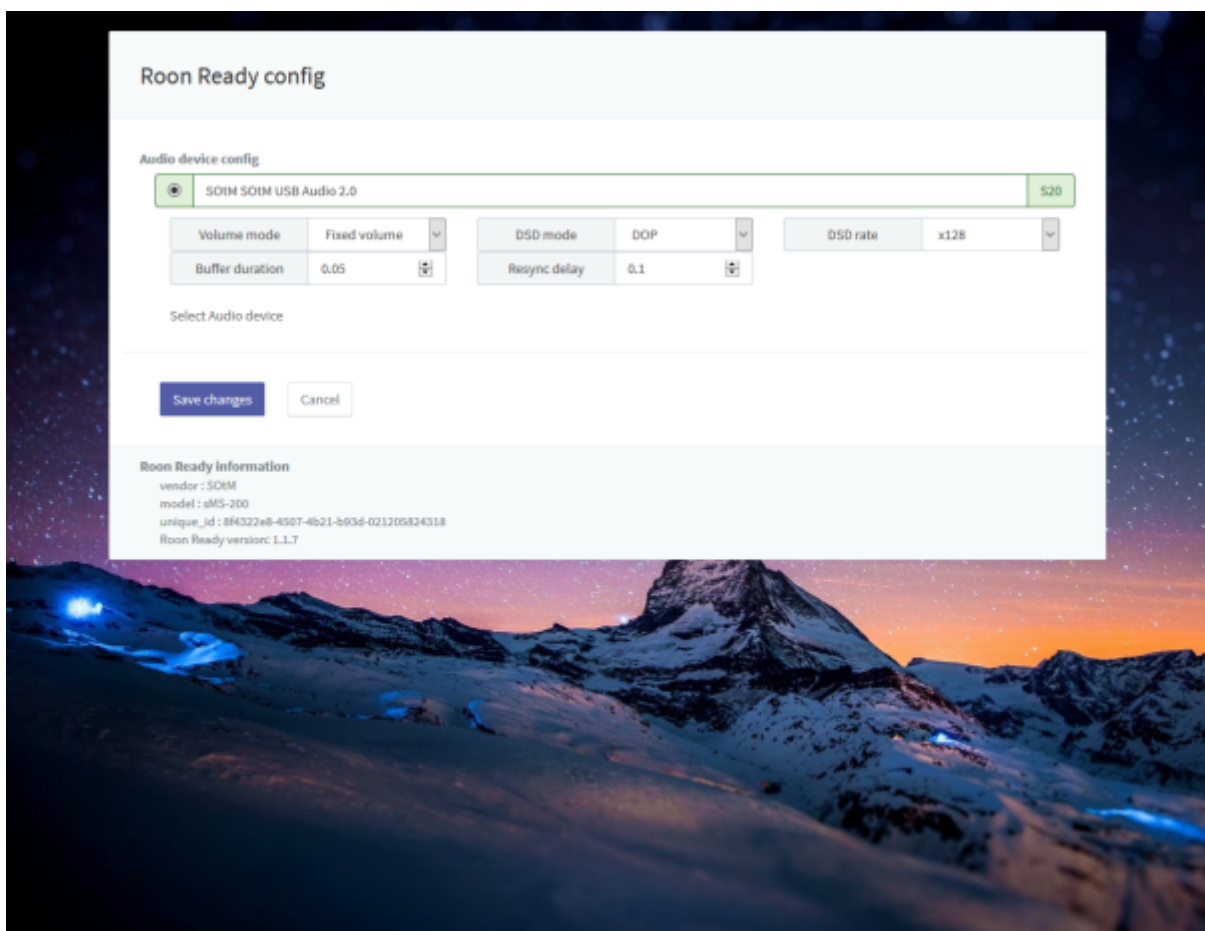



- **Audio device config:** USB DAC
- **Volume mode:** Fixed, Software, Device Controls
- **DSD mode:** DSD NONE, NATIVE, DOP, DCS, NATIVE/DOP, NATIVE/DCS
- **DSD rate:** DSD x64, x128, x256
- **Buffer duration:** 0.01 ~ 0.1

- Resync delay: 0.1 ~ 0.5 가 0.01


## Roon Ready

Remote Roon Server Roon Ready 'Active' Roon  
Settings > Audio Roon Ready SMS-200

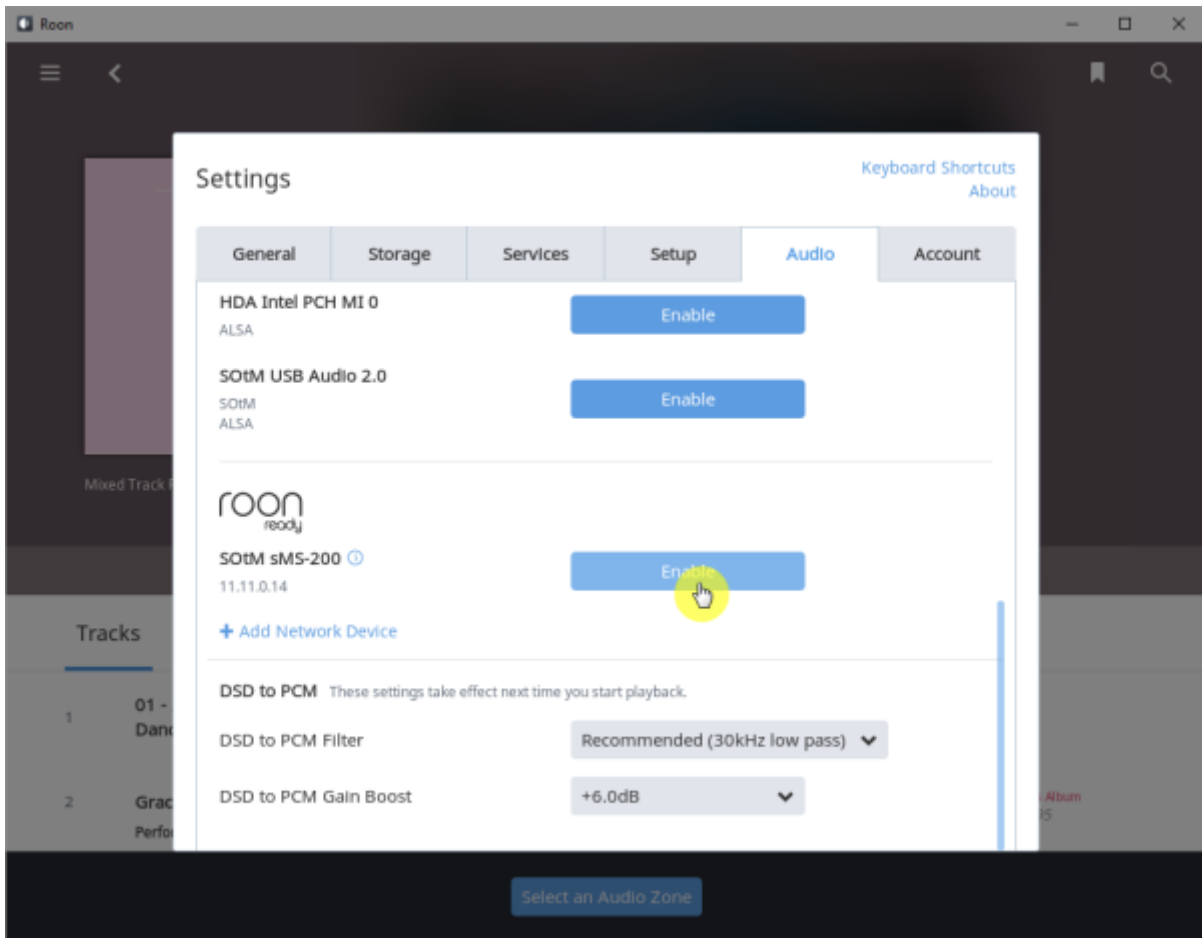

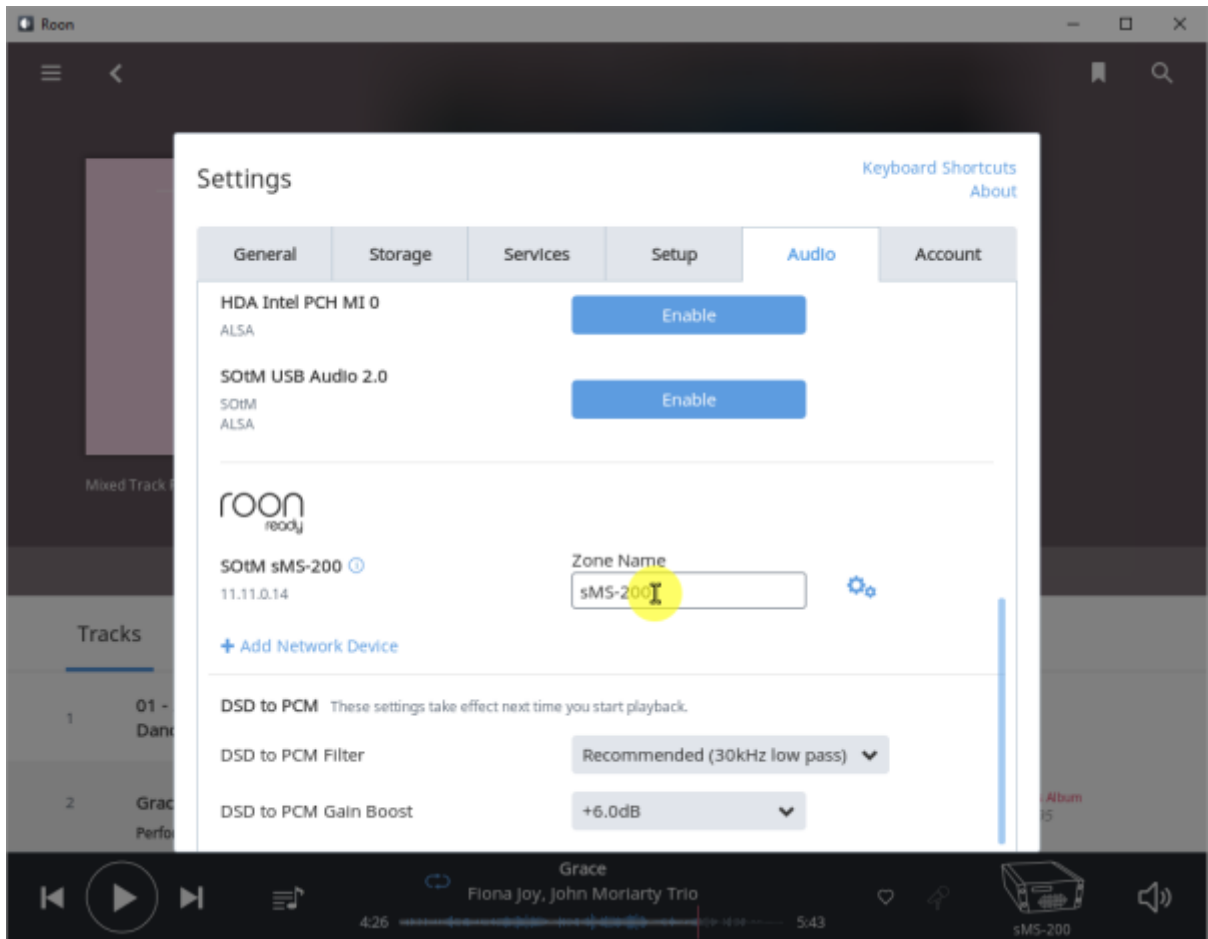

sMS-200 Audio zone

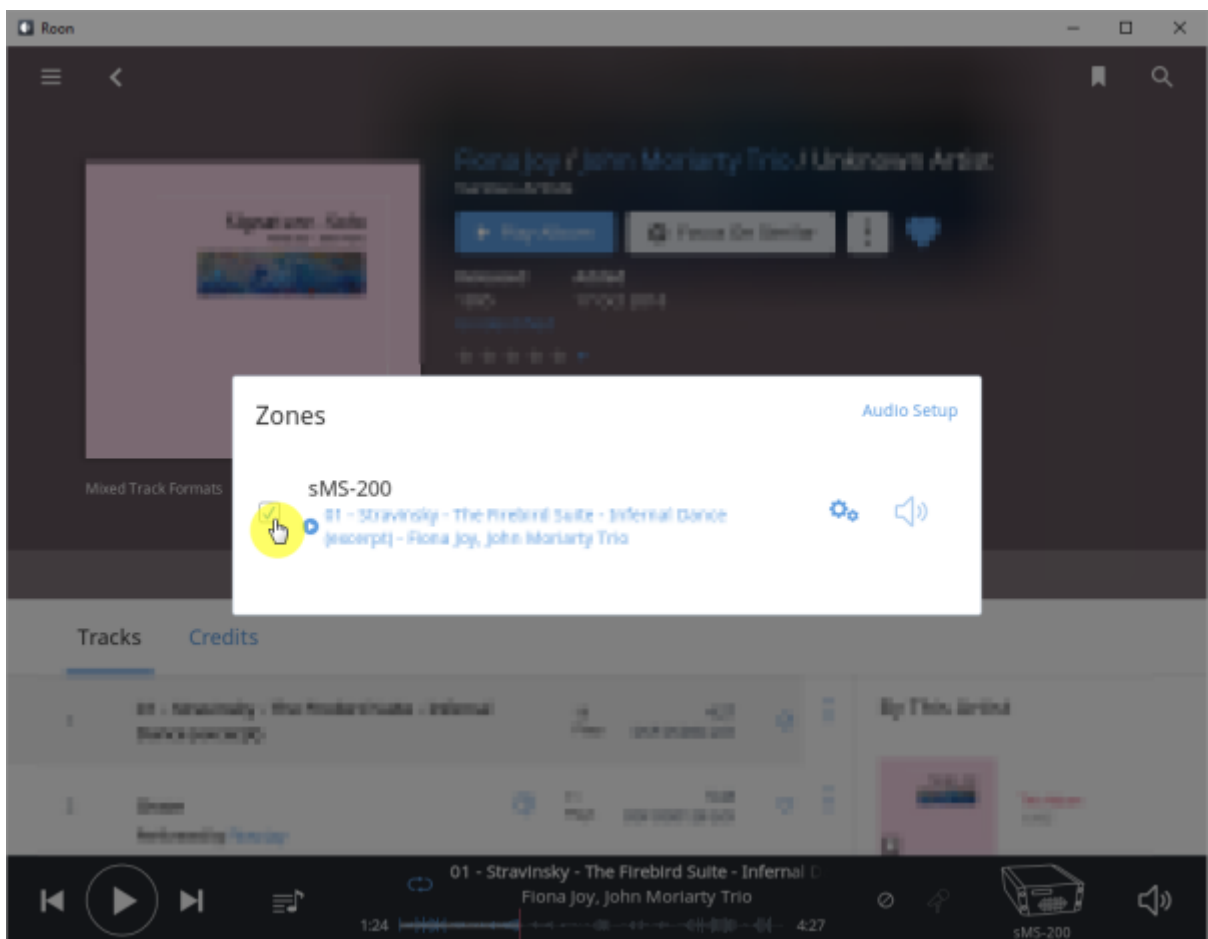




# Roon Server

Roon Server   Roon Core   Roon Output   Roon Remote   [Roonlabs](#)

# Roon Server

[Eunhasu](#)   Roon Server   'Active'

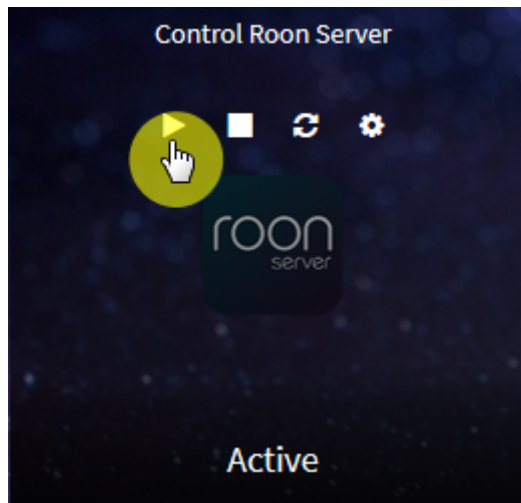


[Roon Server](#) 가 'Active'   Roon Desktop   Core   SMS-1000SQ   Core




### Core



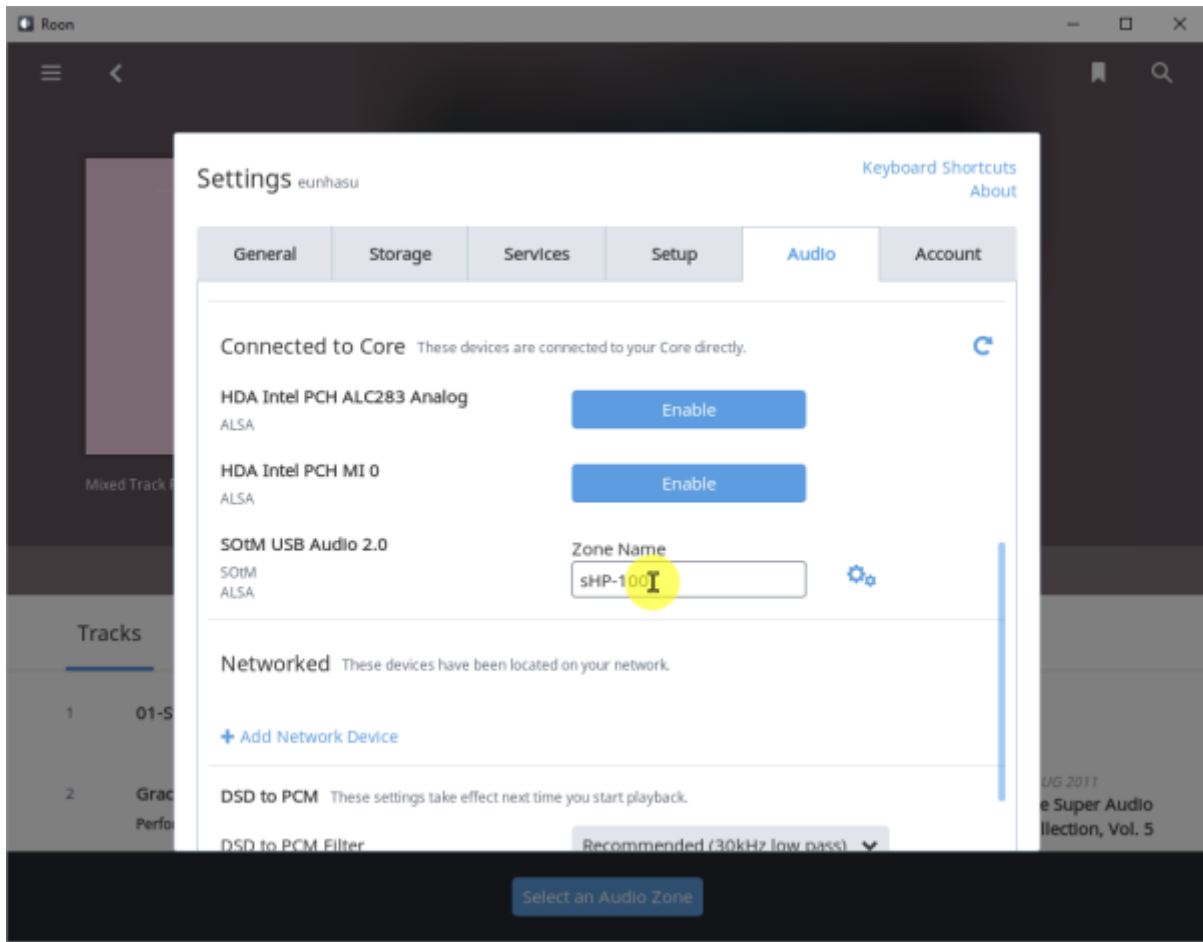

Audio Zone

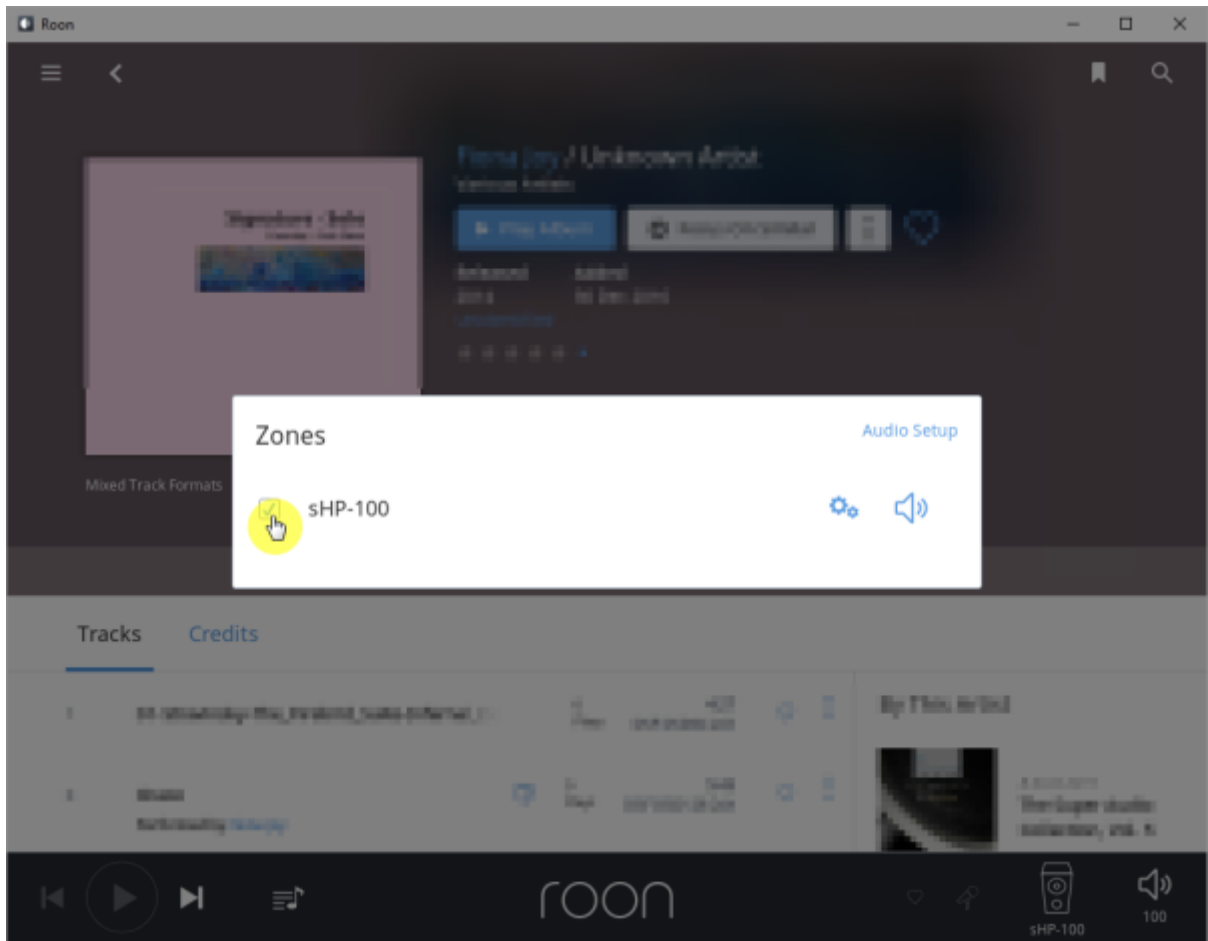

: 2017/01/25 21:00

From:  
<https://www.wiki.sotm-audio.com/> - **SOTM docs**

Permanent link:  
<https://www.wiki.sotm-audio.com/doku.php?id=ko:roon&rev=1485396002>

Last update: **2017/01/25 21:00**

